


INSTRUCTIONS

① Prepare 2 part C and insert them into each side of part A like below picture.

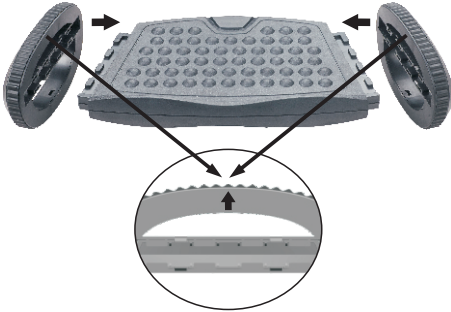


② Push forward both part C according to the indicated arrow till it's locked .



“Note: Be sure Left and Right side in same level”

③ Insert each part B into each part C's center slot .

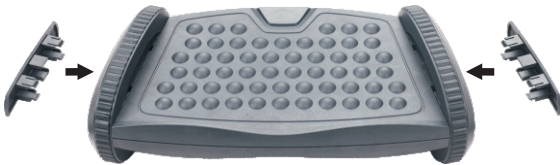

④ Ready to use .



ACCESSORIES LIST

